


Frame Wiring Table Instructions

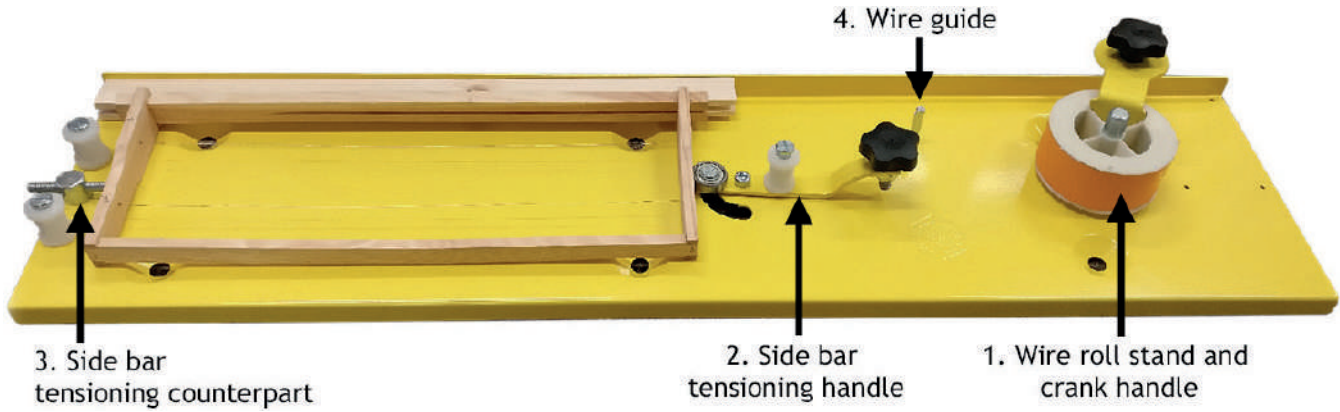

It's not essential to use the wire roll crank handle (1). The roll tightening can be done also by hand. All rolls don't have an appropriate slot for the crank. Adjust the tensioning handle counterpart (3) to fit your frame. The side bar tensioning handle (2) should cause a slight tension to the side bars.

Place the frame and the wire roll on the table. When wiring a shallow super frame, it's a good idea to use a block of wood between the table edge and the frame top bar. In that way the tightening handle will press the side bar's middle spot.



Begin by nailing small nails at the wire start and end points. Add some tension to the side bars with the tightening handle. Guide the wire through the wire guide (4) and string the wire to the frame.

Twist the wire around the nail and punch the nail completely. Tighten the wire by rotating the wire roll. While keeping the wire tight, twist the wire around the second nail. Still keep the wire tight and punch the nail completely. Cut the wire and punch both wire ends into the frame so you won't hurt your fingers with them.

Release the tightening handle. The wire will tighten even more. The wiring is now complete.



An instruction video is also available. View it on the wiring table's product page.

Retailer:
Mesimestari Oy / Honey Paw Ltd
www.mesi.fi/en

